

Table of Contents

- ReadyNAS 5** 1
- Custom ROM** 1
 - Hotfix SACK CVE-2019-11477** 1
 - Max HDD capacity** 1
 - Jumbo Frames** 1
 - Samba Log level** 1
 - ext3 Format** 2
 - Performance Tuning** 2
 - USB Mounts config** 2
 - Disable APPGENIE** 2
 - Transmission Message Level** 3
 - MiniDLNA** 3
 - Downloads** 3

ReadyNAS 5

ReadyNAS Duo V2

Custom ROM

<http://natisbad.org/NAS/index.html>

Hotfix SACK CVE-2019-11477

Add to /etc/init.d/readynas_startup near start

```
echo 0 > /proc/sys/net/ipv4/tcp_sack
echo 0 > /proc/sys/net/ipv4/tcp_dsack
echo 0 > /proc/sys/net/ipv4/tcp_timestamps
```

* MiniDLNA don't like this!

Max HDD capacity

8TB is tested by me. PMR no restrictions, SMR - JBOD only.

You can set RSync (Backup) in JBOD anyway → this can be better solution than RAID1

Jumbo Frames

/etc/init.d/readynas_startup

```
ifconfig eth0 mtu 1600
```

Don't use more, kernel driver cannot work properly with HW acceleration enabled. ReadyNAS DuoV2 can do 97MB/s (776Mbit/s) reads from Samba

Samba Log level

/etc/frontview/samba/addons/addons.conf

```
[global]
log level = 1
```

ext3 Format

(much faster than ext4 - you can fill up to 100% disk space)
 -i bytes per inode (4096-65536)

```
mkfs.ext3 -b 4096 -i 16384 /dev/d/d
tune2fs -i0 -c -1 -o user_xattr,acl /dev/d/d

tune2fs -o journal_data_writeback
```

Remove root reserved space

```
tune2fs -m 0 /dev/d/d
```

Performance Tuning

Mount fstab (UPS recommended)

```
/dev/c/c      /c      ext3
defaults,acl,user_xattr,noatime,nodiratime,nobh,commit=40,data=writeback
0 2
```

```
/dev/c/c      /c      ext4
defaults,acl,user_xattr,noatime,nodiratime,nobh,jqfmt=vfsv0,data=writeback,o
ldalloc      0 2
```

Little tuning in **/etc/init.d/readynas_startup** put near start

```
echo deadline >/sys/block/sda/queue/scheduler
echo deadline >/sys/block/sdb/queue/scheduler
```

Turn off quotas! Don't start cups! (is_rackmount=1) 😊

USB Mounts config

```
/etc/frontview/usb/storage.conf
```

Disable APPGENIE

/etc/frontview/addons/bin/APPGENIE/cp.d/cpinst/cp_updater.sh -> put **exit 0** at start
 or remove it completely `rm -r /etc/frontview/addons/bin/APPGENIE/`

Transmission Message Level

```
/transmission/settings.json  
message-level: 1
```

MiniDLNA

```
grep -q -F 'root_container=B' /etc/minidlna.conf || echo 'root_container=B'  
>>/etc/minidlna.conf  
grep -q -F 'strict_dlna' /etc/minidlna.conf || echo 'strict_dlna=no'  
>>/etc/minidlna.conf  
sed -i '/album_art_names/d' /etc/minidlna.conf
```

Downloads

File	Description
Enable Root Access	This enable SSH access to ReadyNAS
HTop	HTop bash utility
Enable MySQL Access	Enable access to built in MySQL 5.1.49
OwnCloud 8.0.2 ARM	OwnCloud for ReadyNAS - ARM
PHP 5.4.3 ARM	Install PHP 5.4.3
Transmission 2.92 ARM	Bittorent Client for ReadyNAS5

From:
<https://wiki.janforman.com/> - **wiki.janforman.com**

Permanent link:
<https://wiki.janforman.com/storage:readynas>

Last update: **2020/05/08 14:08**

